

Differential pressure sensor Air

Differential pressure transmitter with 8 selectable ranges and outputs 0...5 V, 0...10 V or 4...20 mA. For monitoring the differential pressure of air and other non-flammable and non-aggressive gases. Typical application in HVAC systems for monitoring air filters, fans V-belts as well as the use in pressure differential systems. Options available with LCD display, auto-zero feature. IP65 / NEMA 4X rated enclosure.

Technical data sheet







5-year warranty



Type Overview

Туре	Measuring range pressure [Pa]	Measuring range pressure [inch WC]	Output signal active pressure	Burst pressure	Display type	Additional features
22ADP-58Q	-150250	-0.61	05 V,	160 inch WC	-	-
			010 V,	[40 kPa]		
			420 mA			
22ADP-58QA	-150250	-0.61	05 V,	160 inch WC	-	Auto-Zero
			010 V,	[40 kPa]		
			420 mA			
22ADP-58QB	-150250	-0.61	05 V,	160 inch WC	LCD	Auto-Zero
			010 V,	[40 kPa]		
			420 mA			
22ADP-58QL	-150250	-0.61	05 V,	160 inch WC	LCD	-
			010 V,	[40 kPa]		
			420 mA			

Technical data Electrical Data Nominal voltage AC/DC 24 V AC 19...29 V / DC 15...35 V Nominal voltage range Power consumption AC 4.3 VA Power consumption DC 2.3 W **Electrical connection** Pluggable spring loaded terminal block max. Cable entry Cable gland with strain relief ø6...8 mm (1/2" NPT conduit adapter included) **Functional Data** Sensor Technology piezo measuring element Application air Multirange 8 measuring ranges selectable Voltage output 1 x 0...5 V, 0...10 V, min. resistance 10 $k\Omega$ Current output 1x 4...20 mA, max. resistance 500Ω Output 0...5/10 V selectable with switch Output signal active note Display LCD, 1.14x1.38 in. [29x35 mm] With backlight Measured values: Pa, inch WC (programmable) adjustable 0.8 s or 4.0 s Response time **Measuring Data** Measured values Differential pressure Volumetric flow (with A-22G-A05) Measuring fluid air and non-aggressive gases



	Technical data sheet			22ADP-	·58Q
Measuring Data	Measuring range pressure settings	Setting	Range [Pa]	Range [inch WC]	Factory setting
		S0	0250	01	V
		S1	0100	00.4	Ť
		S2	050	00.2	
		S3	025	00.1	
		S4	-2525	-0.10.1	
		S5	-5050	-0.20.2	
		S6	-100100	-0.40.4	
		S7	-150150	-0.60.6	
	Accuracy pressure			nge <1 inch WC	
	Long-term stability	±2.5% F	SO (Full Scale	Output) / 4 yr.	
Materials	Cable gland	PA6, bla	ck		
	Housing	Cover: P	er: PC, orange		
			PC, orange		
			R70, black		
		UV resis	tant		
Safety Data	Protection class IEC/EN	III, Safe	ty Extra-Low \	/oltage (SELV)	
	Power source UL	Class 2 S	Supply		
	Degree of protection IEC/EN	IP65			
	Degree of protection NEMA/UL	NEMA 4	Х		
	Enclosure	UL Enclo	sure Type 4X		
	EU Conformity	CE Mark	ting		
	Certification IEC/EN	IEC/EN (60730-1 and I	EC/EN 60730-2-6	
	Quality Standard	ISO 900	1		
	UL Approval	cULus a E60730-		0-1A/-2-6, CAN/CS	A
	Type of action	Type 1			
	Rated impulse voltage supply	0.8 kV			
	Installation method	Indeper	ndently moun	ted control	
	Pollution degree	3			
	Ambient humidity	Max. 95	% RH, non-co	ndensing	
	Ambient temperature	-1050°	°C [15122°F]	
	Fluid temperature	-1050°	°C [15122°F]	
				·	

Safety Notes



Storage temperature

This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application. Unauthorized modifications are prohibited. The product must not be used in relation with any equipment that in case of a failure may threaten humans, animals or assets.

-4...176°F [-20...80°C]

Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Only authorized specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.

The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Remarks

Automated zero-point calibration (Auto Zero)

Transmitters equipped with the auto-zero calibration are maintenance-free.

The auto-zero calibration electronically adjusts the transmitter zero every 10 minutes. The function eliminates all output signal drift due to thermal, electronic or mechanical effects. The auto-zero adjustment takes approx. 4 seconds after which the device returns to its normal measuring mode. During the 4 second adjustment period, the output and display values will freeze to the latest measured value.

Manual zero-point calibration

In normal operation zero-point calibration should be executed every 12 months.


Attention! For executing zero-point calibration the power supply must be connected one hour before.

- Release both connection tubes from the pressure terminals + and -
- Press the button until the LED lights permanently
- Wait until the LED flashes again and reinstall the connection tubes to the pressure ports (note
- + and -)

Indicators and Operation

Indicators

Depending on the device and the number of measured values, the display automatically scales. Parameters, such as the fading in/out of measured values, brightness and traffic light function, are changed via the app or bus system. During the boot process, the software and hardware versions are displayed.

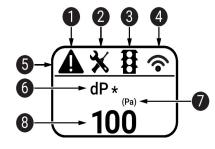

- 1 Fault / sensor failure
- 2 Service / visual inspection due
- 3 TLF (traffic light function) active (thresholds for display colour changes)
- 4 Radio active (not available)
- Status bar
- 6 Measured value (* appears when TLF function is activated for this value)
- Unit of measure
- 8 Measured value

Parts included

Parts included	Description	Туре
	Mounting plate L housing	A-22D-A10
	Duct connector kit, PVC tube 2 m, 2 connection elements (Plastic) for 22ADP	A-22AP-A08
	Dowels Screws 1/2" NPT conduit adapter	

Accessories

Optional accessories	Description	Туре
	Pitot tube, Metal, L 1.5", Tube connection 0.2"	A-22AP-A01
	Pitot tube, Metal, L 4", Tube connection 0.2"	A-22AP-A03
Tools	Description	Туре
	Belimo Duct Sensor Assistant App	Belimo Duct
		Sensor Assistant
		Арр
	Bluetooth dongle for Belimo Duct Sensor Assistant App	A-22G-A05
	* Bluetooth dongle A-22G-A05	

Certified and available in North America, European Union, EFTA States and UK.



Service

Tools connection

This sensor can be operated and parametrized using the Belimo Assistant App.

When using the Belimo Duct Sensor Assistant App, the Bluetooth dongle is required to enable communication between the app and the Belimo sensor.


For the standard operation and parametrization of the sensor the Bluetooth dongle and the Belimo Duct Sensor Assistant App are not needed. The sensor will arrive pre-configured with the factory default settings shown above.

Requirement:

- Bluetooth dongle (Belimo Part No: A-22G-A05)
- Bluetooth-capable smartphone
- Belimo Duct Sensor Assistant App (Google Play & Apple App Store)

Procedure:

- Plug the Bluetooth dongle into the sensor via the Micro-USB connector or by means of the interface PCB
- Connect Bluetooth-capable smartphone with Bluetooth dongle
- Select parametrization in the Belimo Assistant App

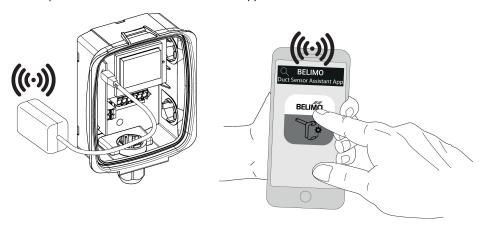


Wiring Diagram

Notes

When switching from 0...10 V to 0...5 V output voltage also the current will be adjusted from 4...20 mA to 4...12 mA.





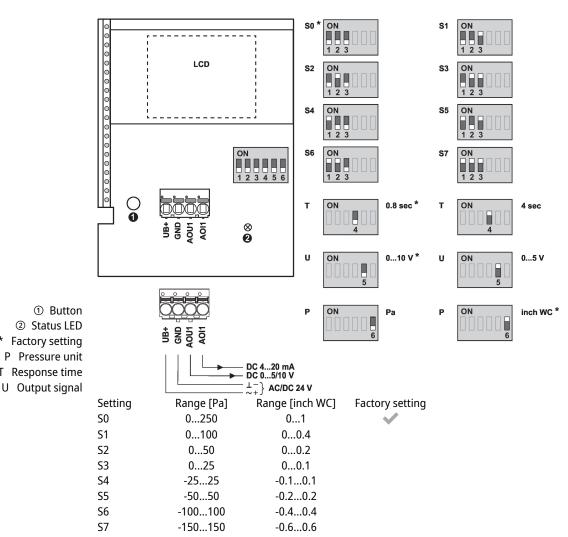


Wiring note power supply AC

* Factory setting

T Response time


For the sensor to function properly, polarity must be observed with a DC supply as well as an AC


If the AC supply is connected incorrectly, i.e. if the wires are reversed, this can lead to the destruction of the sensor.

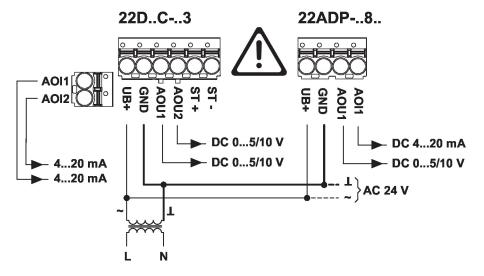



Dimensions

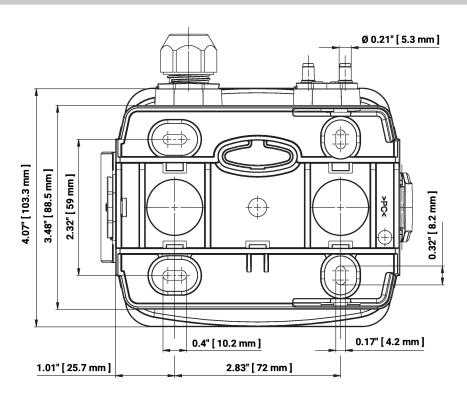

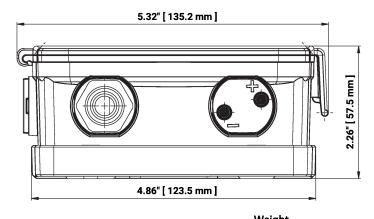

Туре	Weight
22ADP-58Q	0.84 lb [0.38 kg]
22ADP-58QA	0.88 lb [0.40 kg]
22ADP-58QB	0.93 lb [0.42 kg]
22ADP-58QL	0.90 lb [0.41 kg]

Further documentation

• Installation instructions