

Technical data sheet

Z2050QS-F

• For closed cold and warm water systems

• For switching functions and 2-point controls on the water side of air-handling units and heating systems

• Snap-assembly of the actuator





Type overview

Туре	DN
Z2050QS-F	15

Technical data

Functional data	Valve size [mm]	0.5" [15]
	Fluid	chilled or hot water, up to 60% glycol
	Fluid Temp Range (water)	36212°F [2100°C]
	Body Pressure Rating	360 psi
	Close-off pressure ∆ps	75 psi
	Differential pressure Δpmax	40kPa
	Flow characteristic	equal percentage Operating range 1590°
	Angle of rotation note	
	Installation position	upright to horizontal (in relation to the stem)
	Servicing	maintenance-free
	Flow Pattern	2-way
	Leakage rate	0% 75°
	Controllable flow range	
	Cv	1.2
Materials	Valve body	forged brass
	Stem	brass
	Stem seal	EPDM O-ring
	Seat	PTFE, O-Ring EPDM
	Seat	PTFE
	O-ring	EPDM (lubricated)
	Ball	chrome plated brass
uitable actuators	Non-Spring	CQB
	Electrical fail-safe	CQKB(X)

Safety notes



• WARNING: This product can expose you to lead which is known to the State of California to cause cancer and reproductive harm. For more information go to www.p65warnings.ca.gov

• If temperature exceeds 212°F operating range due to a boiler control failure the valve will safely contain the hot water but manufacturers product warranty becomes invalid. Valve and actuator replacement is at the expense of others.




Application	The QCV zone valves are suited for large commercial buildings where higher close-off and the ability to change flow is desired. Common applications include unit ventilators, fan coil units, VAV reheat coils, fin tube casing, radiant panels and duct coils. The valve fits in space restricted areas and can be assembled without the use of tools.
Mode of operation	The ball valve is adjusted by a rotary actuator. The rotary actuator is controlled by an on/off signal or by a commercially available modulating or floating point control system and moves the ball of the ball valve – the throttling device – to the position preset by the control signal. Open the ball valve is carried out counterclockwise and close it clockwise.
Simple direct mounting	Tool-free snap assembly.
	The actuator can be plugged on the valve by hand (Caution! Just vertical movements). Pins must match the holes on the flange.
	The mounting orientation in relation to the valve can be selected in 180° increments. (Possible two times)

Installation notes

Recommended installation positions

The ball valve can be installed upright to horizontal. The ball valve may not be installed in a hanging position, i.e. with the stem pointing downwards.

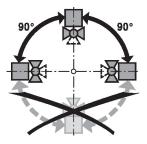

Water quality requirements

Belimo valves are regulating devices. For the valves to function correctly in the long term, they must be kept free from particle debris (e.g. welding beads during installation work). The installation of a suitable strainer is recommended.


Servicing Ball valves and rotary actuators are maintenance-free.

Before any service work on the control element is carried out, it is essential to isolate the rotary actuator from the power supply (by unplugging the electrical cable if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level).

The system must not be returned to service until the ball valve and the rotary actuator have been correctly reassembled in accordance with the instructions and the pipeline has been refilled by professionally trained personnel.

Flow direction

Direction of flow in both directions possible.

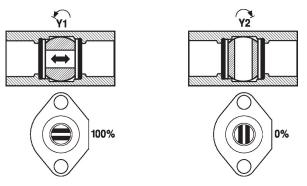



Technical data sheet


Flow setting

g The angle of rotation of the actuator can be changed by a clip in 2.5° increments. This is used to set the kvs value (maximum flow rate of the valve).

Remove end stop clip and place at desired position.

After every change of the flow setting by means of end stop clip, an adaptation must be triggered on the modulating actuators.

Dimensions

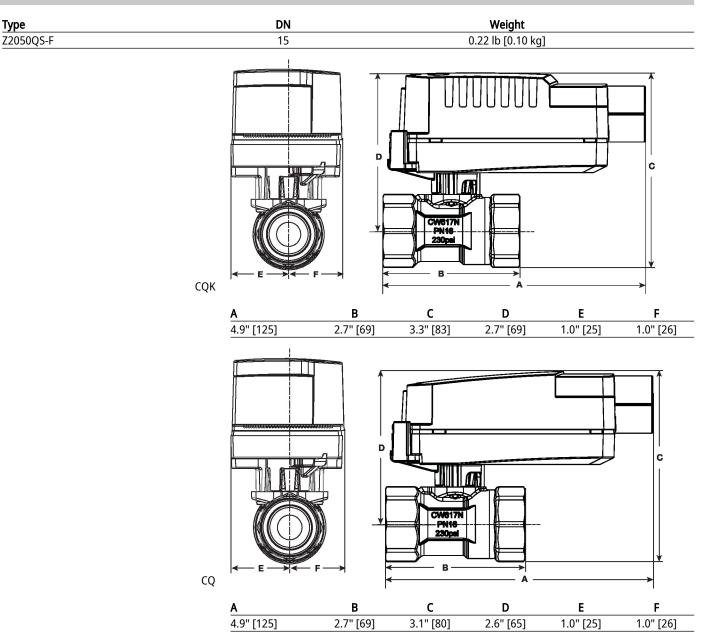



Modulating, Electrical fail-safe, 24 V

- Nominal voltage AC 24 V
- Control Modulating 2...10 V2...10 V



CQKX24-SR



Technical data

Electrical data	Nominal voltage	AC 24 V	
	Nominal voltage frequency	50/60 Hz	
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V	
	Power consumption in operation	2.5 W	
	Power consumption in rest position	0.5 W	
	Transformer sizing	5 VA	
	Electrical Connection	22 GA plenum cable, 1 m, 3 m or 5 m, with 1/2" NPT conduit connector	
	Overload Protection	electronic thoughout 090° rotation	
	Electrical Protection	actuators are double insulated	
Functional data	Operating range Y	210 V	
	Operating range Y note	420 mA w/ ZG-R01 (500 Ω, 1/4 W resistor)	
	Operating range Y variable	0.510 V	
	Position feedback U	210 V	
	Position feedback U variable	0.510 V	
	Bridging time (PF)	2 s	
	Pre-charging time	520 s	
	Angle of rotation	90°	
	Angle of rotation note	adjustable with mechanical stop	
	Running Time (Motor)	75 s / 90°	
	Running time fail-safe	<60 s	
	Noise level, motor	35 dB(A)	
	Noise level, fail-safe	35 dB(A)	
	Position indication	pointer	
Safety data	Power source UL	Class 2 Supply	
	Degree of protection IEC/EN	IP40	
	Degree of protection NEMA/UL	NEMA 2	
	Enclosure	UL Enclosure Type 2	
	Agency Listing	cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02	
		CE acc. to 2014/30/EU and 2014/35/EU	
	Quality Standard	ISO 9001	
	UL 2043 Compliant	Suitable for use in air plenums per Section 300.22(C) of the NEC and Section 602 of the IMC	
	Ambient humidity	Max. 95% RH, non-condensing	
	Ambient temperature	35104°F [240°C]	
	Storage temperature	-40176°F [-4080°C]	
	Servicing	maintenance-free	



Technical data sheet

CQKX24-SR

	Weight	Weight	0.43 lb [0.20 kg]
	Materials	Housing material	UL94-5VA
Product features			
	Application	lication Electrical fail-safe proportional ZoneTight actuator. Valve selection should be done in accordance with the flow parameters and system specifications. The actuator is mounted directly to the valve without the need for tools or additional linkage.	
		The actuator operates in response to a 210 V or 420mA control signal.	
Electrical installation			
	obse Actua S Only A 500 Actua Actua Meet Warn Durir to wo who Failur		l in parallel. Power consumption and input impedance must be red by DC 24 V. gative (-) leg of control circuits. nverts the 420 mA control signal to 210 V. e do not have numbers; use color codes instead. vithout the need of an electrical ground connection. ponents! servicing and troubleshooting of this product, it may be necessary opponents. Have a qualified licensed electrician or other individual ed in handling live electrical components perform these tasks. I safety precautions when exposed to live electrical components bus injury.
Wiring diagrams			

AC 24 V Transformer

