

Differential pressure sensor Water

Active sensor (4...20 mA / 0...5 V / 0...10 V) for differential pressure measurement in HVAC systems. The sensor is suitable for water and water-glycol mixtures. NEMA 4X / IP65 rated housing with an LCD display. 10-foot PVC or armored cables.



5-year warranty


Type Overview

Type	Measuring range [psi]	Output signal active pressure	Overpressure	Negative overpressure	Burst pressure
22PDP-585	0...100	4...20 mA, 0...5 V, 0...10 V	200 psi	-1 bar	2000 psi
22PDP-588	0...250	4...20 mA, 0...5 V, 0...10 V	500 psi	-1 bar	5000 psi

Measuring range: The sensor can measure differential pressure (dp) within this range. The maximum operating pressure (relative pressure to atmosphere prel) must be within the measuring range. For further information, please refer to «Product features».

Technical data

Electrical Data	Nominal voltage	AC/DC 24 V				
	Nominal voltage range	AC 21.6...26.4 V / DC 21.6...26.4 V				
	Power consumption AC	3.1 VA				
	Power consumption DC	1.4 W				
	Electrical connection	Pluggable spring-loaded terminal block max. 2.5 mm ²				
	Cable entry	Cable gland with strain relief ø6...8 mm				
Functional Data	Medium	Water Water-glycol mixture				
	Multirange	4 measuring ranges selectable				
	Voltage output	1 x 0...5 V, 0...10 V, min. resistance 10 kΩ				
	Current output	1x 4...20 mA, max. resistance 500 Ω				
	Output signal active note	0...5/10 V or 4...20 mA output, selectable with switch				
	Mechanical connection	pressure connector: 1/4" NPT				
	Display	LCD, 0.63x1.50" [16x38 mm]				
	Typical response time	<0.5 s				
Measuring Data	Measured values	Differential pressure				
Specification pressure	Measuring range pressure settings	Type	Range1	Range2	Range3	Range4
			[psi]	[psi]	[psi]	[psi]
		..-585	0...100	0...10	0...20	0...50
..-588	0...250	0...25	0...50	0...125		
Factory setting: Range1						

Technical data

Specification pressure	Accuracy	Range1: $\pm 1.0\%$ FS Range2: $\pm 0.5\%$ FS Range3: $\pm 0.4\%$ FS Range4: $\pm 0.4\%$ FS ...@ 22°C [72°F] $\pm 0.03\%$ FS / K for each pressure transmitter FS = full scale (FS always references the maximum sensor measuring range, independent of the selected measuring range)
	Long term stability	$\pm 0.25\%$ FS p.a. and per pressure transmitter
Safety Data	Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)
	Degree of protection IEC/EN	IP65
	Degree of protection NEMA/UL	NEMA 4X
	Housing	UL Enclosure Type 4X
	EU Conformity	CE Marking
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-6
	Quality Standard	ISO 9001
	UL Approval	cULus acc. to UL60730-1/-2-6, CAN/CSA E60730-1/-2
	Type of action	Type 1
	Rated impulse voltage supply	0.8 kV
	Pollution degree	4
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	32...122°F [0...50°C]
Fluid temperature	-40...220°F [-40...105°C] Frost protection must be guaranteed at fluid temperatures < 2 °C [< 36 °F]	
Storage temperature	-40...140°F [-40...60°C]	
Materials	Housing	Cover: PC, transparent Bottom: PC, orange Seal: NBR
	Cable gland	PA6, black
	Cable	PVC
	Fluid wetted parts	Stainless steel 17-4 PH

Safety Notes


This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application. Unauthorized modifications are prohibited. The product must not be used in relation with any equipment that in case of a failure may threaten humans, animals or assets.

Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Only authorized specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.

The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product Features


Solution The device measures the relative pressure of the system to atmospheric pressure. Make sure that the maximum operating pressure stays within the measuring range.

Differential pressure \leq measuring range (dp)
 Operating pressure \leq measuring range (dp)
 Measuring range (dp)

The sensor can measure differential pressures (dp) within this range. The maximum operating pressure (prel) must be within the measuring range.

Overpressure (prel)
 Maximum relative pressure (prel) that the device can withstand without permanent damage. No measurement is possible within the overpressure range.

Burst pressure (prel)
 Maximum relative pressure (prel) up to which the device housing is tight. If this pressure is exceeded, the sensor will leak or burst.

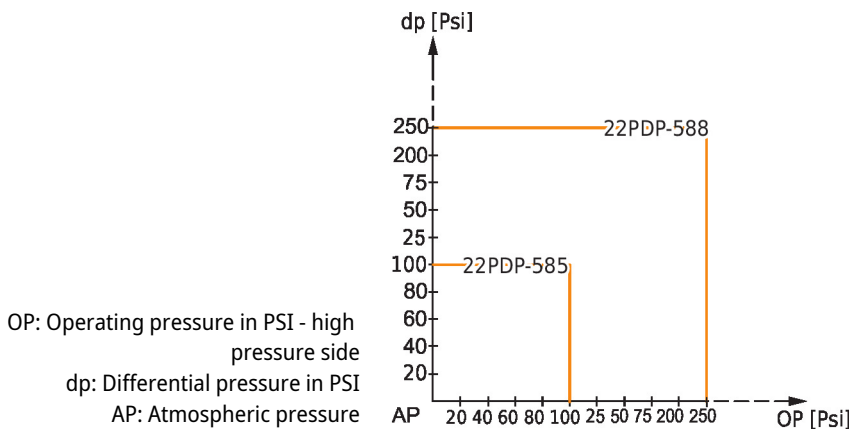

Remarks

Manual zero-point calibration In normal operation zero-point calibration should be executed every 12 months.

A sensor zeroing can be initiated by pressing and holding the internal ZERO switch for at least 3 seconds. If both pressure ports are close to zero pressure, the device will calibrate with a new zero point. The zeroing can also be initiated by pressing the optionally connected remote switch, and thus by holding the ZERO terminal low for 3 seconds.

Please make sure on the system side that the same pressure conditions exist at both remote sensors as precondition of a correct zeroing.

NOTE: Both the low and high pressure sensors must be open to atmosphere to perform the autozeroing function.

Indicators

Indicators The display has 2 lines with 8 characters each.


The software version, model pressure range and output signal type are displayed during booting.

The display is menu-guided and used for programming during installation as well as for display of pressure read from sensors.

The menu allows to set parameters such as output signal, pressure range, pressure scale, pressure port, damping and backlight.

For a convenient reading of the display, an upright wall mounting of the sensor housing with the display at the top, electrical connections on the right and at the bottom is recommended.

Indicators

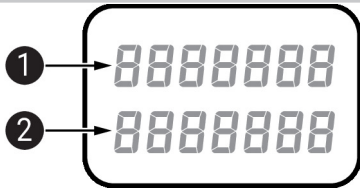

1 Start and programming

Line 1: Parameter
Line 2: Value

2 Operation

Line 1: Differential pressure value
Line 2: Differential pressure unit

Installation notes



Important: Before installing the sensors, ensure the sensor ports are free from any fluids. Failure to remove excessive fluids may damage the sensors.
Avoid pressure peaks (e.g., with fast opened valves).

Parts included

Description	Type
Mounting plate L housing	A-22D-A10
Cable Gland with strain relief $\varnothing 6...8$ mm	
Dowels	
Screws	


Accessories

Optional accessories	Description	Type
	3-valve manifold with bracket, for installing and isolating pipe differential sensors	EXT-GS-3WM
	Reduction adapter, G 1/4" (internal thread) to G 1/2" (external thread)	A-22WP-A02
	Connection adapter flex conduit, M20x1.5, for cable gland 1x 6 mm, Multipack 10 pcs.	A-22G-A01.1
Electrical accessories	Description	Type
	Stainless steel cable extension	A-22PDP-A01 A-22PDP-A02


Wiring Diagram



The external switch at terminal ZERO is optional. It can be used in case remote zeroing is required. Otherwise, ZERO terminal can be left open. Zeroing can be initialized by pressing the internal ZERO key in this case.
See also details under chapter manual zero-point calibration.

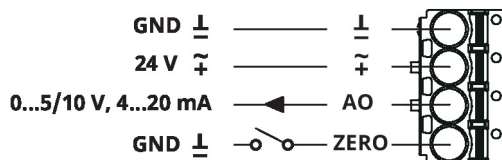

Dimensions

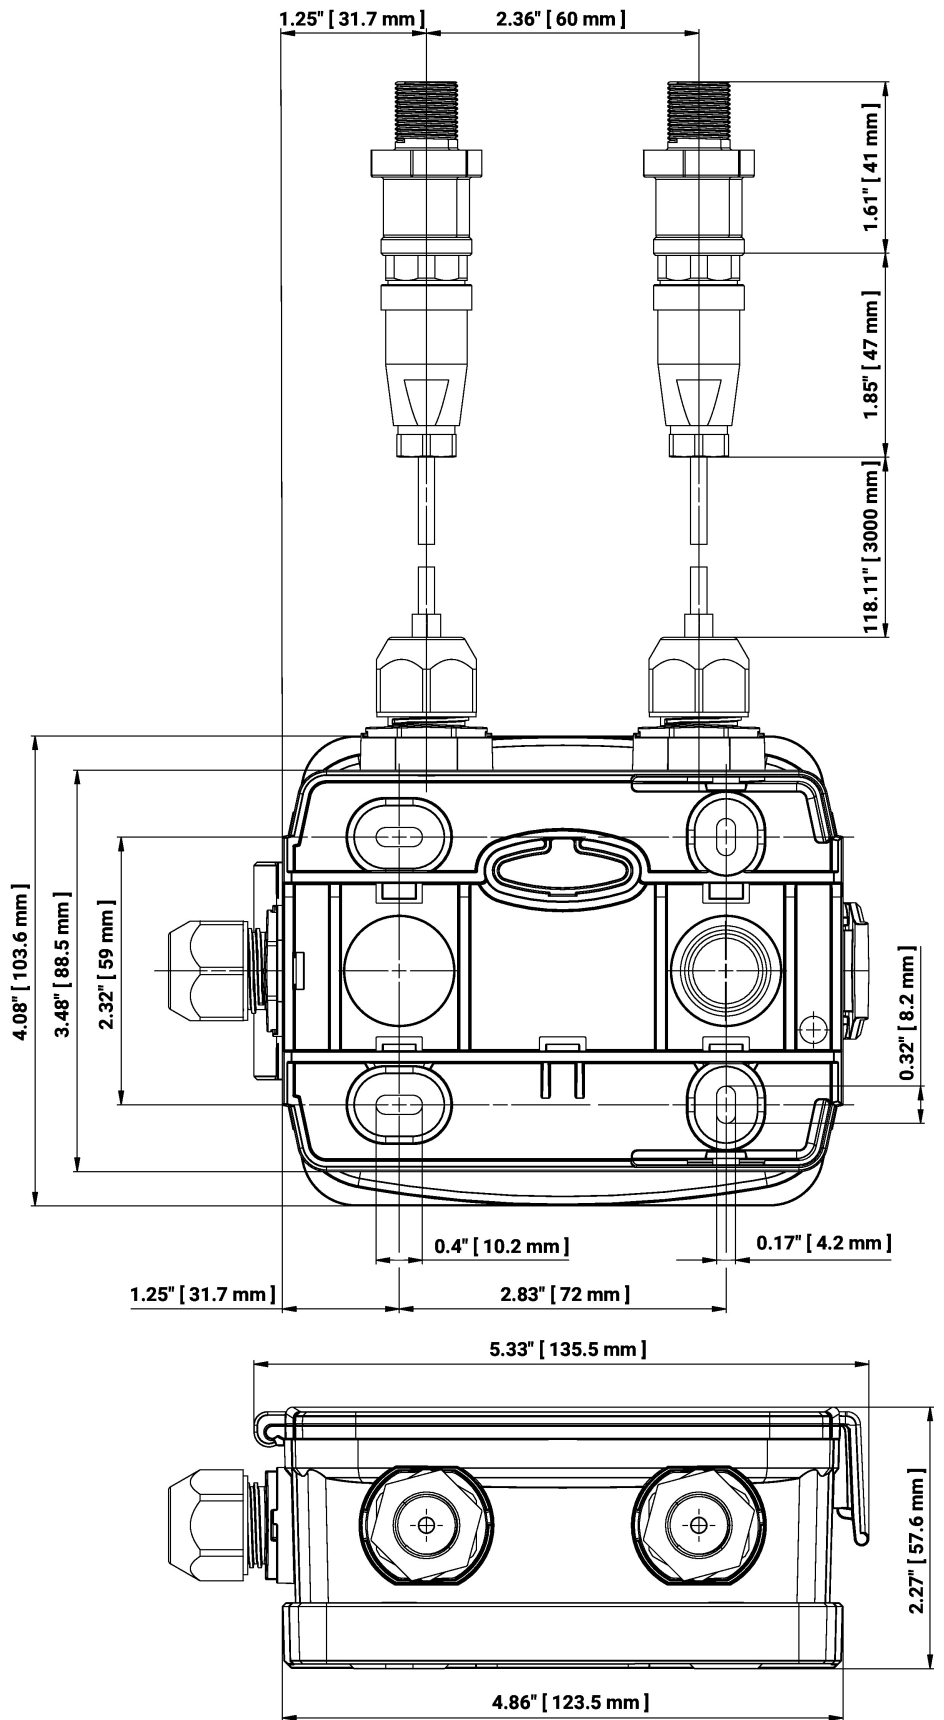

Further documentation

- Installation instructions
- Operating instructions